

## DESIGN SPECIALTIES

## ASPECT MODEL FIREPLACE DOOR INSTALLATION INSTRUCTIONS

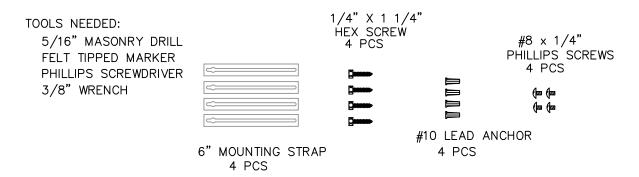



PROVISIONS FOR MOUNTING TO THE FIREPLACE HAVE BEEN MADE ON ALL SIDES OF THE FIREPLACE DOOR. INSTALLER SHOULD DETERMINE WHERE BEST TO ATTACH THE DOOR TO THE FIREPLACE. ATTACHMENT AT FOUR PLACES IS RECOMMENDED.

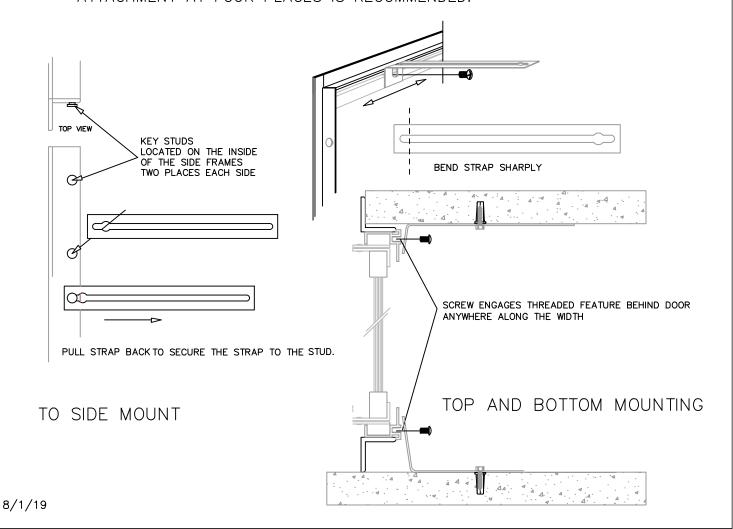



PAGE 2

  - 1. INSPECT THE INSIDE OF THE FIREPLACE TO DETERMINE WHERE BEST TO ATTACH THE DOOR. GENERALLY IT IS EASIEST TO USE SIDE MOUNTING.
- 2. CAREFULLY REMOVE THE FIREPLACE DOOR FROM THE PACKAGING.

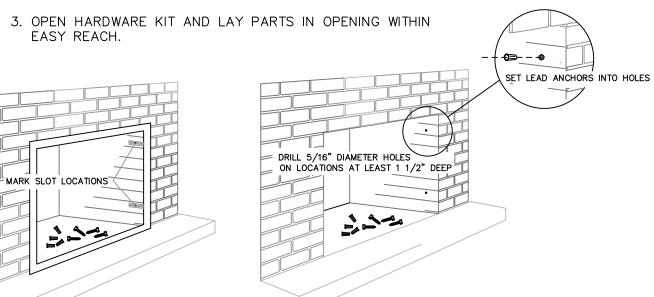






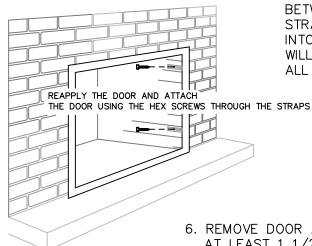

- 6. REMOVE DOOR AND USING A 5/16" MASONRY BIT, DRILL HOLES AT LEAST 1 1/2" DEEP.
- 7. PLACE LEAD ÁNCHORS INTO HOLES. A SLIGHT TAP WITH A HAMMER SHOULD SET THEM IN PLACE.
- 8. PLACE DOOR BACK ONTO OPENING AND ENGAGE THE STRAP TO ONE OF THE STUDS, PLACE 1 1/4" SCREW THROUGH STRAP AND INTO LEAD ANCHOR. TIGHTEN SCREW MAKING SURE THE DOOR IS TIGHT AGAINST THE OPENING. REPEAT THIS FOR THE REST OF THE STRAPS.


## DOOR ADJUSTMENTS

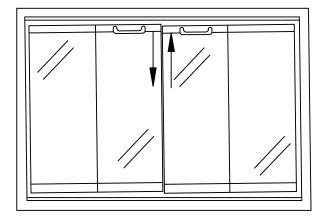


OUR FIREPLACE DOORS ARE FULLY ASSEMBLED AND ADJUSTED PRIOR TO LEAVING THE FACTORY. HOWEVER, THE GLASS DOORS MAY HAVE SHIFTED DURING SHIPMENT, REQUIRING AN ADJUSTMENT TO GET THE GLASS DOORS TO HANG PROPERLY.


AFTER INSTALLING THE FIREPLACE DOOR, CHECK HOW DOORS OPERATE. CHECK THE GAPS AT THE CENTER AND BETWEEN THE GLASS DOORS AND THE FRAME. IF THE GAPS ARE THE SAME BUT THE TOPS ARE NOT IN ALIGNMENT, IT MAY BE NECESSARY TO MOVE THE BOTTOM FRAME OVER TO BRING THE TOPS OF THE GLASS DOORS INTO ALIGNMENT. LOOSEN THE MOUNTING STRAPS AND MOVE THE BOTTOM OVER SLIGHTLY UNTIL THE GLASS DOORS ARE IN ALIGNMENT. RE—TIGHTEN THE MOUNTING STRAP.

IF ONE DOOR STICKS OUT FROM THE OTHER ONE, YOU WILL NEED TO MOVE ONE OF THE CORNERS OF THE FRAME OUT SLIGHTLY. ON THE SIDE THAT THE GLASS DOORS ARE IN FROM THE OTHER DOOR, LOOSEN THE NEAREST MOUNTING STRAP AND PULL THE DOOR FORWARD UNTIL THE DOORS ARE IN ALIGNMENT. RE—TIGHTEN MOUNTING STRAP.

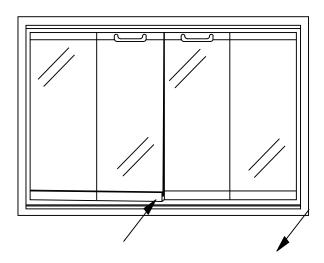

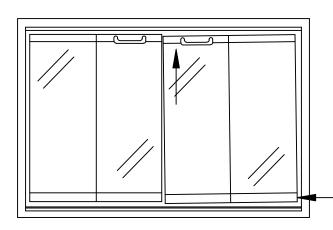

IF THE GAP BETWEEN THE GLASS AT THE CENTER IS DIFFERENT TOP TO BOTTOM, YOU WILL NEED TO ADJUST THE HINGES. THE GAP SHOULD BE APPROXIMATELY 1/16" BETWEEN THE GLASS DOORS AT THE CENTER (1/8" FOR DOORS FOR FACTORY BUILT FIREPLACES). DETERMINE WHICH HINGE IS OUT OF ALIGNMENT. USING A PHILLIPS SCREWDRIVER, LOOSEN THE SCREW THAT HOLDS THE HINGE TO THE FRAME, AND SLIDE THE HINGE OVER SLIGHTLY AND RE—TIGHTEN. CHECK THE DOOR OPERATION, AND REPEAT THIS PROCEDURE IF NECESSARY.

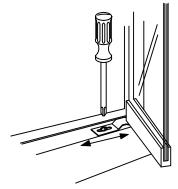

PAGE 4

## OPTIONAL MESH CURTAIN INSTALLATION

