
ALLURAVISION™ SERIES ELECTRIC FIREPLACE



Specifications

Model	BTU	Width		Height		Depth		Viewing Area
		Actual	Framing	Actual	Framing	Actual	Framing	Viewing Area
NEFL32CHD	5000	32 5/8	33 1/8	15 7/8	16 1/8	5 13/16	6 1/16	30 13/16 x 11 1/16
NEFL42CHD	5000	42 1/16	42 9/16	15 7/8	16 1/8	5 13/16	6 1/16	40 1/4 x 11 1/16
NEFL50CHD	5000	50 5/16	50 13/16	15 7/8	16 1/8	5 13/16	6 1/16	48 1/2 x 11 1/16
NEFL60CHD	5000	60 3/16	60 11/16	15 7/8	16 1/8	5 13/16	6 1/16	58 5/16 x 11 1/16
NEFL74CHD	5000	74 5/16	74 13/16	15 7/8	16 1/8	5 13/16	6 1/16	72 1/2 x 11 1/16
NEFL100CHD	5000	100 5/16	100 13/16	15 7/8	16 1/8	5 13/16	6 1/16	98 1/2 x 11 1/16
NEFL32CHS	5000	32 5/8	33 1/8	15 7/8	16 1/8	4 1/4	4 1/2	30 13/16 x 11 1/16
NEFL42CHS	5000	42 1/16	42 9/16	15 7/8	16 1/8	4 1/4	4 1/2	40 1/4 x 11 1/16
NEFL50CHS	5000	50 5/16	50 13/16	15 7/8	16 1/8	4 1/4	4 1/2	48 1/2 x 11 1/16
NEFL60CHS	5000	60 3/16	60 11/16	15 7/8	16 1/8	4 1/4	4 1/2	58 5/16 x 11 1/16
NEFL74CHS	5000	74 5/16	74 13/16	15 7/8	16 1/8	4 1/4	4 1/2	72 1/2 x 11 1/16
NEFL100CHS	5000	100 5/16	100 13/16	15 7/8	16 1/8	4 1/4	4 1/2	98 1/2 x 11 1/16

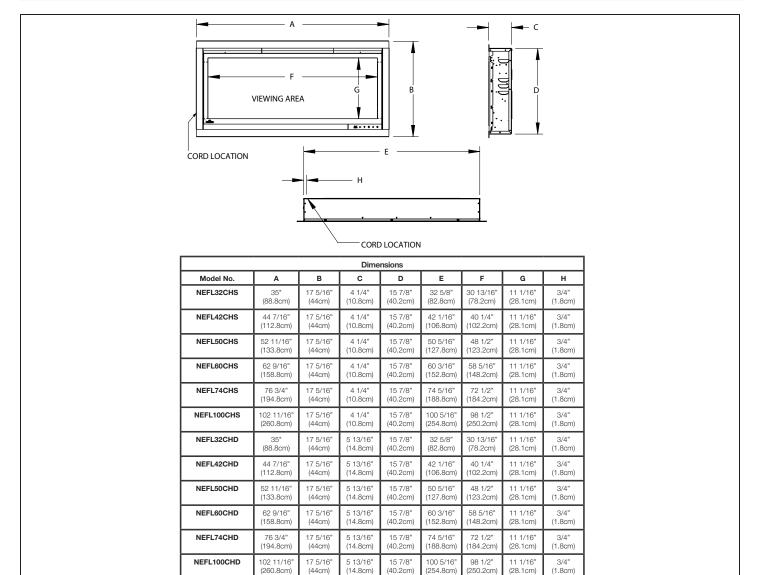


Product information provided is not complete and is subject to change without notice. Please consult the installation manual for the most up to date installation information.


ALLURAVISION™ SERIES ELECTRIC FIREPLACE



Clearances Minimum Mantel Clearances

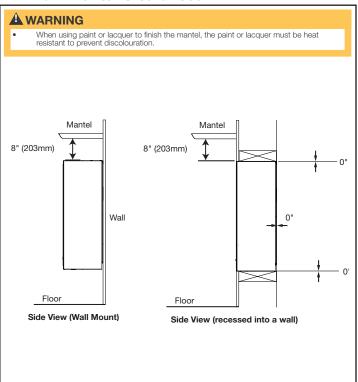


Framing

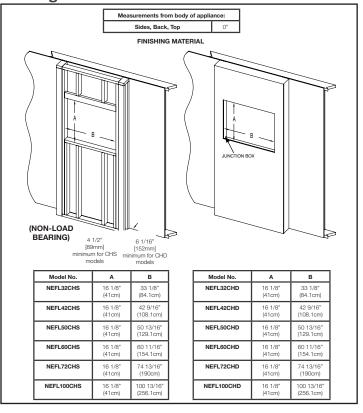

Appliance Installation

Side Panel Installation (Wall Mount Installation Only)

 Install left and right panels (FIG. 1) by securing 4 fasteners (2 per panel) to bottom of appliance (FIG. 2).

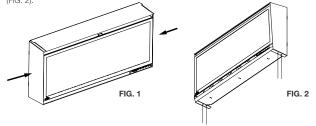


Recessing the Appliance into the Wall

Due to the many different materials used on different walls, it is highly recommended that you consult your local builder before you install this appliance on the wall.

Select a location that is not prone to moisture and is located at least 36" (91.4cm) away from combustible materials such curtain drapes, furniture, bedding, paper etc.

 - Measure the appliance and create a rough in with electrical. The electrical junction box is located on the left side of the appliance.
- 2. Remove the front glass (see "front glass installation and removal" section in your manual).
- 3. Remove the plastic panel holders by removing the screws (FIG. 1 and 2)




. If side covers are installed prior to recessed installation, remove the side covers by removing the screws (FIG. 3 and 4).





 - 5. Install trims (see "trim installation" section in your manual).
- Hold the appliance up to ensure it will fit into the framing (see "framing recessed installation" section in your manual).
- 7. Apply shims (not supplied) between the appliance and the frame.
- 3. Use 4 screws to secure the appliance into the wall (FIG. 5). Do not overtighten screws.



- 9. Re-install the plastic panel holders.
- Place the crystals or optional topaz glass chips and drift wood logs (CHD models only) along the media tray (see "crystal ember installation" and "optional topaz glass chips and drift wood log installation" sections in your manual).
- 11. Install front glass (see "front glass installation and removal" section in your manual).

note

2 sets of holes are provided for recessing into the wall. The wall structure may limit how far the appliance can be recessed. Use the appropriate set of holes when recessing to the frame. Apply shims (not supplied) between appliance and frame.

It is recommended that the walls of the appliance enclosure be finishing (i.e. drywall) to avoid exposed insulation or vapour barrier coming in contact with the appliance. This will ensure clearance to combustibles is maintained.