


## MEASURING FOR ARCHED FIREPLACE DOORS:

DUE TO THE NATURE OF ARCHED FIREPLACES, GREAT CARE SHOULD BE TAKEN TO ASSURE THAT A GOOD REPRESENTATION OF THE OPENING IS USED TO BUILD THE FIREPLACE DOOR. IN MOST CASES, OVERLAPPING THE OPENING WITH THE OUTER FRAME IS DESIRABLE. THIS ALLOWS FOR INCONSISTANCIES IN THE ARCHED SECTION TO BE COVERED BY THE DOOR. THIS PROVIDES A NICE SYMMETRICAL APPEARANCE OF THE FIREPLACE. IT IS ALSO EASIER TO MOUNT THE FIREPLACE DOOR TO THE OPENING BECAUSE THE TOLERANCES ARE LESS CRITICAL. OCCASIONALLY AN INSIDE FIT IS DESIRABLE. PLEASE TAKE TIME TO ACCURATELY RECORD ALL NECESSARY INFORMATION. INSIDE FIT DOORS WILL BE MADE SYMMETRICAL WHENEVER POSSIBLE. IF THE OPENING IS VERY IRREGULAR IT IS POSSIBLE TO MAKE THE OUTER DOOR FRAME TO FOLLOW THE OPENING. IT MAY BE NECESSARY TO FILL GAPS BETWEEN DOOR AND FASCIA. A MORTAR LIP ATTACHED TO THE OUTER EDGE OF THE FIREPLACE DOOR MAY MAKE FILING GAPS EASIER. PLEASE NOTE IF A MORTAR LIP IS NEEDED FOR AN INSIDE FIT.

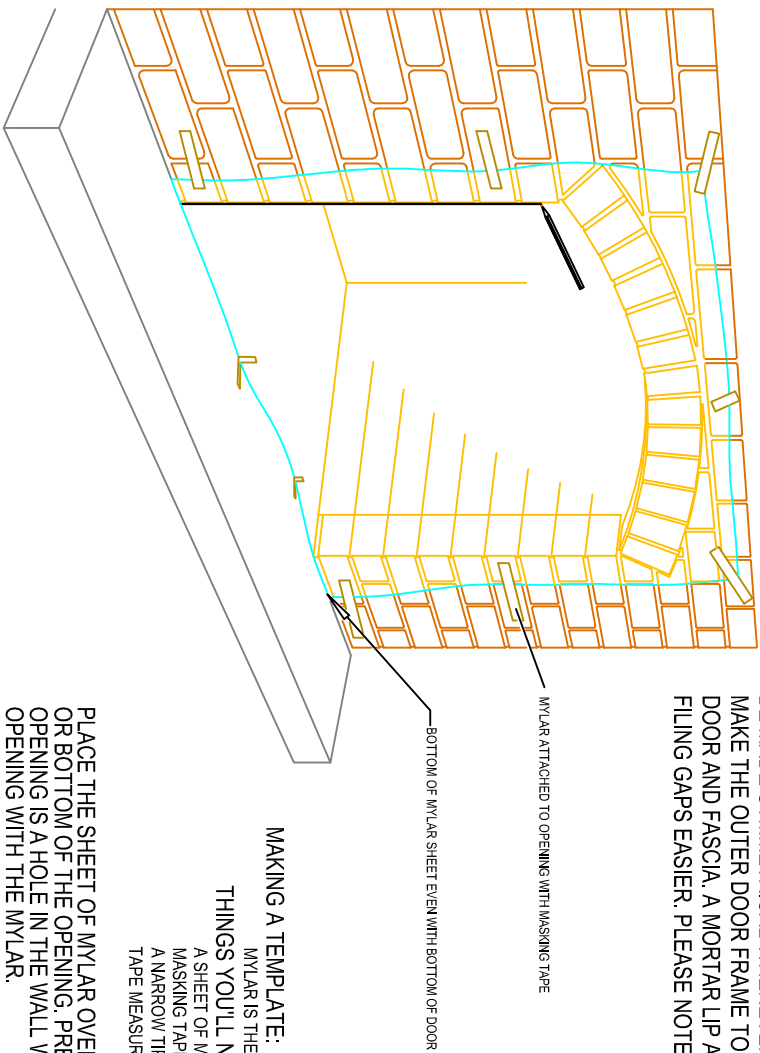

### MAKING A TEMPLATE:

MYLAR IS THE PREFERRED METHOD OF RECORDING THE PHYSICAL SHAPE OF THE OPENING. THINGS YOU'LL NEED:

- A SHEET OF MYLAR
- MASKING TAPE
- A NARROW TIPPED FELT MARKER
- TAPE MEASURE

PLACE THE SHEET OF MYLAR OVER THE OPENING SO THAT THE BOTTOM OF THE SHEET IS FLAT TO THE HEARTH OR BOTTOM OF THE OPENING. PREFERABLY THIS IS WHERE THE BOTTOM EDGE OF THE DOOR WILL BE. IF THE OPENING IS A HOLE IN THE WALL WITH THE FINISHED DOOR TO OVERLAP THE BOTTOM, JUST COVER THE OPENING WITH THE MYLAR.

USE MASKING TAPE. TAPE THE SHEET IN PLACE SECURELY TO THE FRONT OF THE OPENING. THE TOP ARCH LINE SHOULD REFLECT THE LOWEST PART OF THE OPENING, THE BOTTOM OF THE LINTEL OR FASCIA, WHICHEVER IS LOWEST.

USE THE MARKER AND MARK THE OUTLINE OF THE OPENING ONTO THE MYLAR. A THIN LINE IS BEST. IT IS OK IF THERE ARE A FEW "SKIPS" IN THE OUTLINE AS LONG AS THE CRITICAL SHAPE IS REPRESENTED.


AFTER THE OUTLINE IS MADE, MARK WHICH SIDE OF THE OPENING IS THE RIGHT AND LEFT AS YOU ARE LOOKING AT THE FIREPLACE.

IF THE FASCIA IS ABOVE THE LINTEL LINE MARKED ON THE TEMPLATE, MEASURE THE DIFFERENCE AND RECORD THAT ON THE TEMPLATE.

RECORD THE STORE NAME, PHONE NUMBER AND CONTACT NAME ON THE TEMPLATE ALONG WITH ANY NOTES YOU THINK ARE NECESSARY.

FILL OUT THE SUPREME SERIES ORDER FORM AND ATTACH TO TEMPLATE

ROLL TEMPLATE UP AND SEND IT ALONG WITH THE ORDER FORM AND P.O.# TO DESIGN SPECIALTIES.

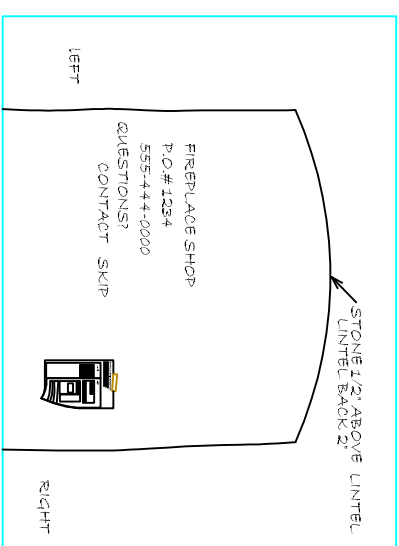

DESIGN SPECIALTIES