

Installation Instructions

Glass Door Hanging Mesh Screen Kit

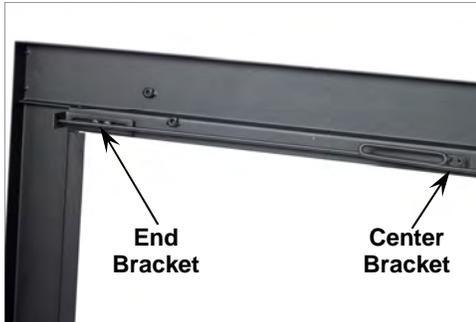


Figure 1

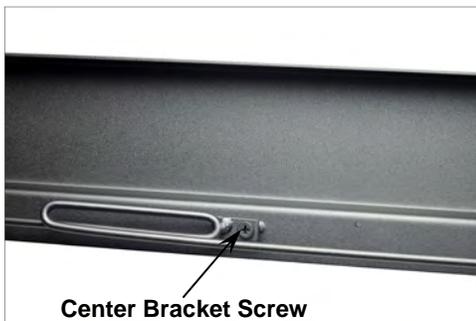


Figure 2



Figure 3

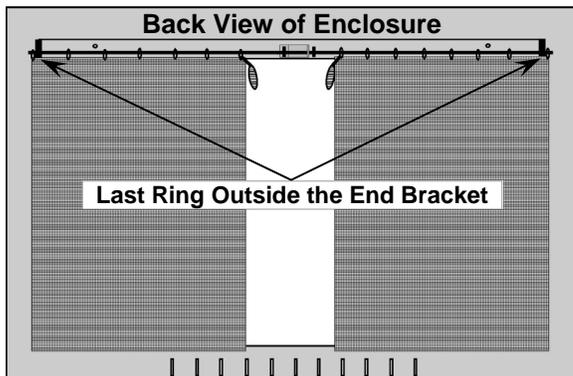


Figure 4

If the Hanging Mesh Screen option was specified when the Stoll Fireplace Enclosure was ordered, the Mesh Curtain Rod and attaching hardware will be installed on the back of the enclosure. **(Figure 1)**

NOTE: All Stoll Essential Collection enclosures now come with the Mesh Curtain Rod pre-installed.

NOTE: Mesh Screen Panels are packed flat in a cardboard sleeve within the master box. Take care that the mesh screen panels are not discarded as packing material.

It is usually easier to install the Mesh Screen Panels before the enclosure is installed on the fireplace. If the enclosure has already been installed remove it from the fireplace before installing the screens.

- Remove the glass doors from the Fireplace Enclosure before installing the Mesh Screen Panels to prevent damage to the doors and/or the enclosure frame. Set the glass doors aside in a safe place.
- Lay the enclosure frame face down on a carpet or other soft surface. **Alternately:** Lean the enclosure frame against a wall or have an assistant hold the frame vertically.
- Remove the screw holding the center bracket of the curtain rod to the back of the enclosure. **(Figure 2)**
 - Slide the Mesh Curtain Rod to one side until the end of the rod clears one end bracket and then out of the other end bracket. **(Figure 3)**
- Thread the rings of one Mesh Screen panel onto the rod.
 - Ensure that the screen handles are installed toward the center of the enclosure and hang toward the room side of the enclosure opening.
 - Leave the last curtain ring hanging loose. **NOTE:** To give the Mesh Curtain a pleated appearance twist each ring one-half turn before threading onto the rod.
 - Reinsert the end of the rod back into the end bracket and slide the rod the opposite way until it clears the other end bracket.
 - Thread the rings of the other mesh panel onto the rod with the handle toward the center and leaving the last curtain ring hanging loose.
 - Reinsert the end of the rod back into the other end bracket.
- Reinstall the screw in the center bracket of the curtain rod.
- Loop the curtain rings that were left hanging loose around the end brackets and hang them on the end of the curtain rod. This step stops the mesh curtain from pulling away from the side of the enclosure when you close the screens. **(Figure 4)**
 - If the end of the curtain rod is too short to hold the rings loosen the end bracket and slide it toward the center of the door leaving $\frac{1}{4}$ " to $\frac{1}{2}$ " of the rod projecting beyond the end bracket.
 - For extra security the last ring can be secured to the end bracket with a small piece of wire. **NOTE:** If the end brackets are equipped with hooks cut into the bracket, simply hang the end curtain rings in the hooks.
- Install or reinstall the Fireplace Enclosure following the instructions that came with the enclosure.