

STANDARD MOUNTING METHOD FOR FDO ZC FIREPLACE DOORS

NOTE:


Due to the vast number of manufacturers and models of factory built fireplaces, we have provided a mounting system to fit the greatest number of fireplaces. However, it may be necessary to use an alternative to our standard method of installation. The installer must determine the best method to get the fireplace door. These doors are intended to fit inside the fireplace opening. Holes are provided on the sides of the door to attach the door directly to the inside of the opening. It may be necessary to use an alternative method to install fireplace doors on some fireplaces. Alternative brackets can be provided upon request from the retailer.

STANDARD HARDWARE KIT FOR FACTORY BUILT FIREPLACES



TOOLS NEEDED :

PENCIL
1/16" DRILL
PHILLIPS SCREWDRIVER

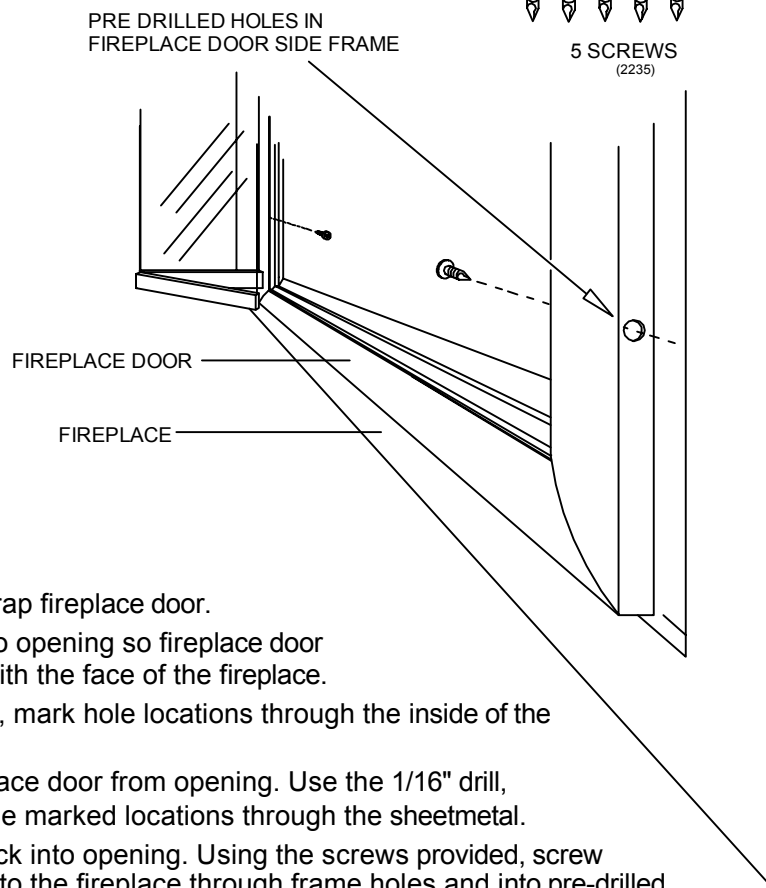

INSTRUCTIONS:

1. Carefully unwrap fireplace door.
2. Place door into opening so fireplace door face is even with the face of the fireplace.
3. Using a pencil, mark hole locations through the inside of the door frame.
4. Remove fireplace door from opening. Use the 1/16" drill, drill holes in the marked locations through the sheetmetal.
5. Place door back into opening. Using the screws provided, screw fireplace door to the fireplace through frame holes and into pre-drilled holes in the firebox.

NOTE: self drilling screws are provided to eliminate pre-drilling and speed up the installation. A screwgun with a magnetic tip is required. Care should be taken when using a screwgun to avoid slipping off of the screw and damaging fireplace door.