





# INSTALLATION INSTRUCTIONS FOR DESIGN SPECIALTIES SINGLE DV FRONTS

**TOOLS NEEDED:**


SCREW GUN OR DRILL AND PHILLIPS SCREWDRIVER

**HARDWARE KIT CONSISTS OF:**

DV SUPPORT ANGLE



8 SHEET METAL SCREWS

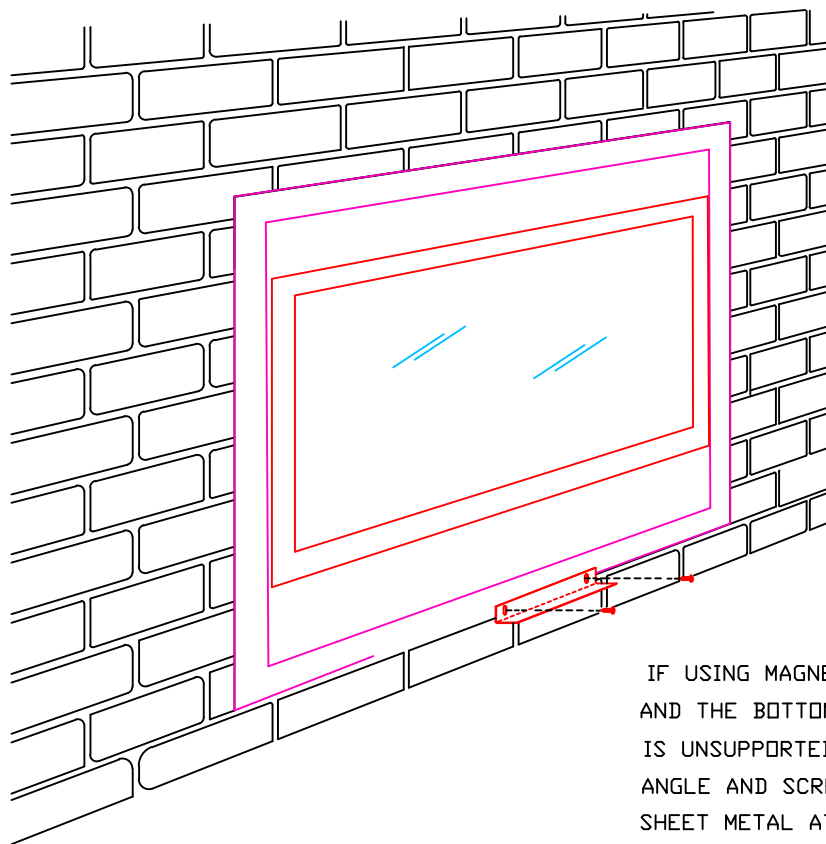

IF USING MAGNET MOUNTING  
AND THE BOTTOM OF THE FRONT  
IS UNSUPPORTED, USE DV SUPPORT  
ANGLE AND SCREW DIRECTLY TO  
SHEET METAL AT BOTTOM