WOODLAND TIMBERS WTS2116RG WTS2418RG





STEP 1 — PLACE THE BACK LOG & RADIANT RISER AS WELL AS THE F9202GO





STEP 2 — PLACE THE FRONT LOGS AS WELL AS 3-4 OF THE CHAR CHUNKS(F9201GO)





STEP 3 — PLACE THE TOP LOGS & THE REMAINING CHAR CHUNKS IN THE EMBER BED

WTS3020RG



STEP 1 — PLACE THE BACK LOG & RADIANT RISER AS WELL AS THE F9202GO



STEP 2 — PLACE THE FRONT LOGS AS WELL AS 3-4 OF THE CHAR CHUNKS(F9201GO)



STEP 3 — PLACE THE TOP LOGS & THE REMAINING CHAR CHUNKS IN THE EMBER BED

RADIANT GLOW KIT INSTRUCTIONS

PLEASE REFER TO ACCESSORY KIT INSTRUCTIONS FOR BURNER AND VALVE INSTALLATION A VIDEO VERSION OF THIS INSTRUCTION MAY BE FOUND AT www.youtube.com/watch?v=AohLv2XcA4E

WARNING: This is a supplemental instruction to clarify the installation of the radiant glow kit, carefully read all instructions before attempting to install this log set.




PARTS LIST

- 1. RADIANT GLOW BRACKET
- 2. EMBERS

STEP 1: Figure 1a illustrates how the radiant glow bracket slides and rests on the back of the burner pan. For installation on burner pans without pilots center the bracket on the back of the burner pan as shown in figure 1b. For installation on burner pans with a pilot install the bracket on the back of the burner pan allowing 1" clearance around the pilot assembly as shown in figure 1c.



STEP 2: Fill the burner pan with the appropriate media as shown in figure 2a (sand for NG and vermiculite for LP) Install the grate over the burner pan. The front legs of the grate go around the burner pan and about 1" in front of the burner pipe as shown in figure 2b.

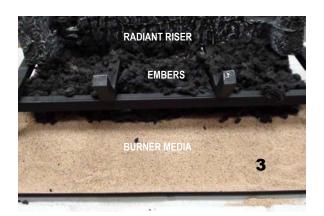

STEP 4: Stuff the embers into the notches of the Radiant Riser and cover all visible burner media as shown in figure 4. Now install the Radiant Heat series logs according to the log diagram sheet included with you log set.









