



Mirage Stone Outdoor Fireplace Assembly Instructions

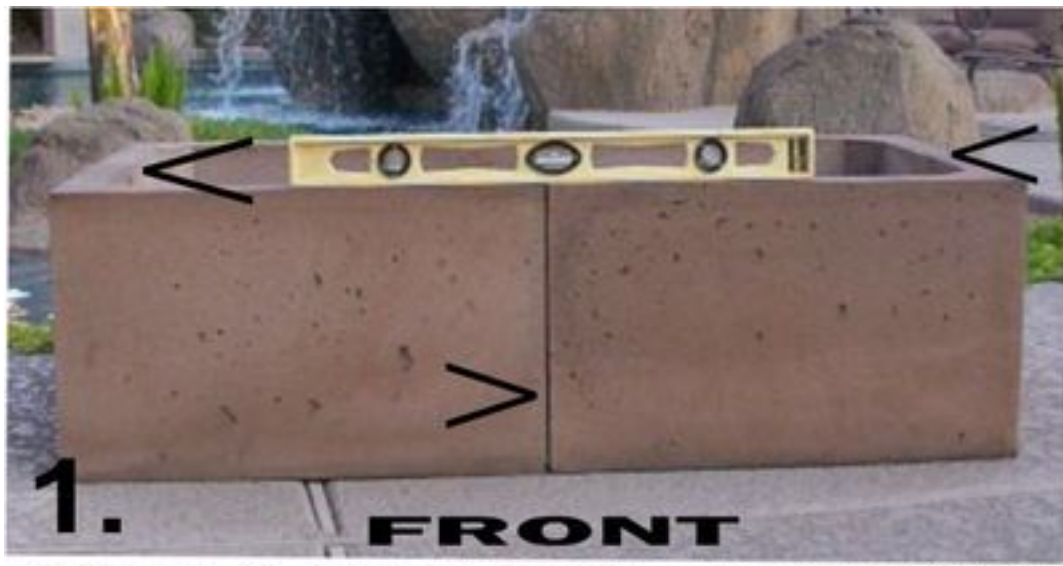

1. FRONT
Align 4 base legs and LEVEL using shims provided.



2.
Starting at the center, center the 6 base blocks as shown.

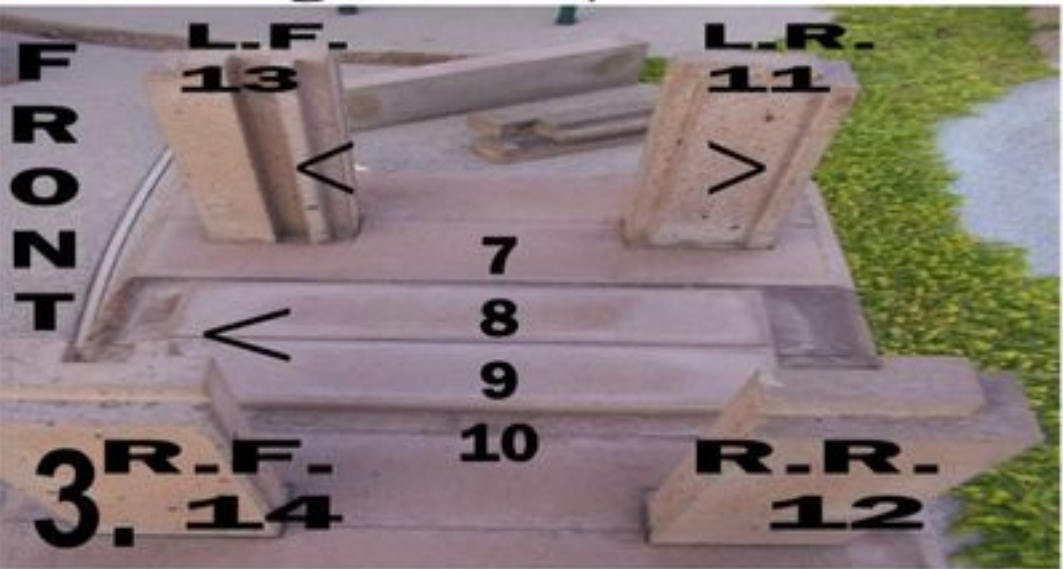

3.
Place corner columns as shown. Place 4 interior blocks from center protruding 1/2 inch from front columns.



4.
Slide down 3 back blocks in v-groove. (Use back screen on open fireplace.)



5.
Place the back, left and right fire chamber blocks. (except on open fireplace.)



6.
Slide left and right side panels down in v-groove. (Screens for open fireplace.)



7.
Place left and right cap blocks in the slots on columns.




8.
Place rear cap block in slots on side cap's.



9.
Place L. and R. upper blocks as shown. Place 2 back angle blocks as shown. Place top cover. (Except on open fireplace.)



10.
Slide door assembly down into front columns. Place front cap block in slots on side block cap's.

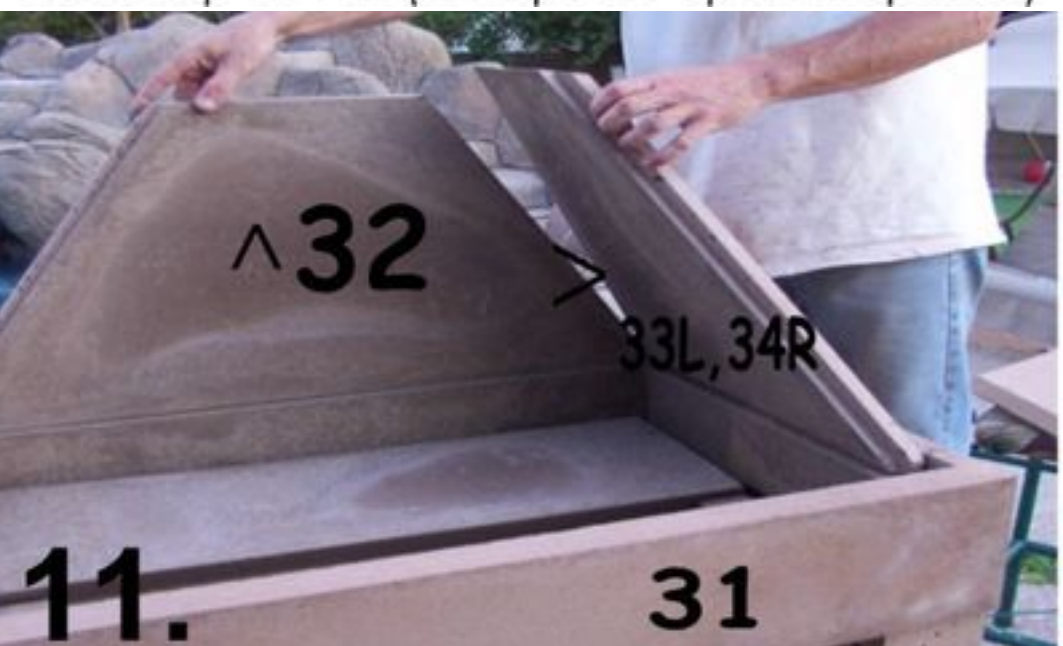

11.
Place back panel in cap slot. Place L. and R. panels in slot. Rest side panels in slot of the back panel.



12.
BE PATIENT! Set one end of the front panel into position. Lift the front of the opposite side panel until the panels line up. Gently lower both panels and lean face block back. Watch your fingers.



Place 2 chimney blocks and top block. Assembly complete.