


INSTALLING A MESH CURTAIN AND ROD KIT INTO YOUR FIREPLACE.

Items Needed:

- 2 Mesh Curtains with Rings & Pulls
- Mounting Bracket
- 3 Screws
- 2 Rods
- Pencil
- Measuring Tape
- Drill With Masonry Bit
- Screwdriver
- Hacksaw

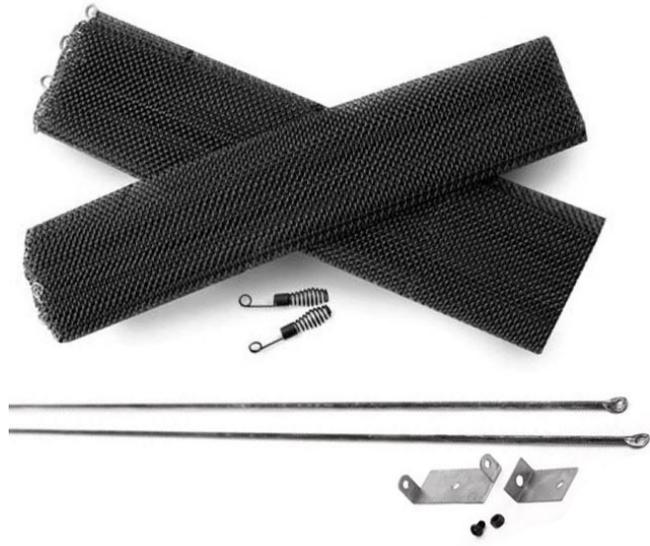

Measure your fireplace width from just inside the firebox. Mark that measurement down.

Example: 42"



Divide that measurement in half and mark your fireplace at that point.

Example: 21"




Pre-drill a hole at that 1/2 way point up through the center of your lintel iron. (The metal bar at the top of your fireplace).



How the rods are threaded through the mounting bracket that is attached to the center of the lintel iron.

4

Take the mounting bracket and screw it up into the lintel bar. See the above picture on how it should look when screwed in. (Do not put the rods in yet).

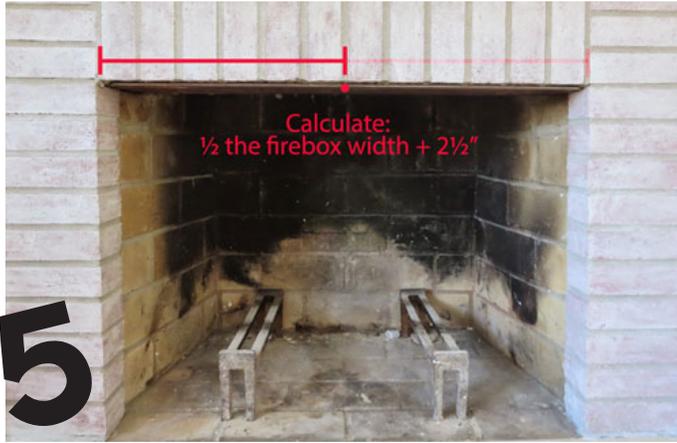


5 Calculate 1/2 the width of your firebox + 2.5 inches. This is the length that you need to cut your rods. Make sure NOT to cut them on the end with the screw hole. Use a hacksaw to cut them. Example $21'' + 2.5'' = 23.5''$



6 Slide the newly cut rod through the mounting brack and hold it up to the edge of the fireplace. Mark where it meets the edge of the fireplace. Repeat on the other side.



7 Pre-drill holes in each of the spots that you marked on the left and right side of the inside of the fireplace.

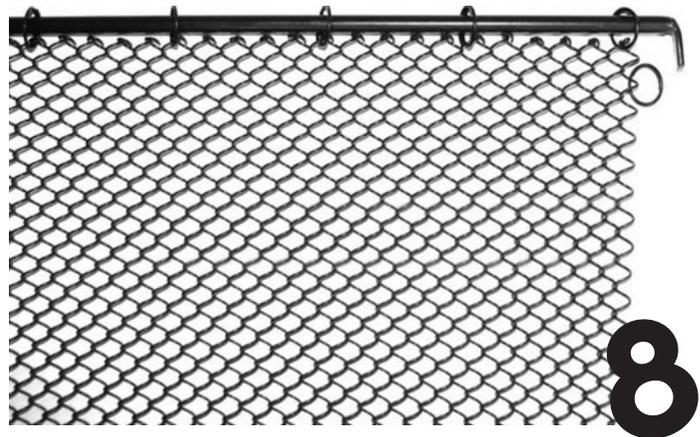

8 Thread each rod through the rings of one curtain, then through the mounting bracket. Screw the rod into place where you pre drilled the holes on the side of the firebox.

FINISHED!

